 


# SP-10/SP-20 External Speaker

## Installation

 
Connect the supplied cable between the "EXT SPKR" jack on the transceiver and RCA jack on the SP-10/SP-20.

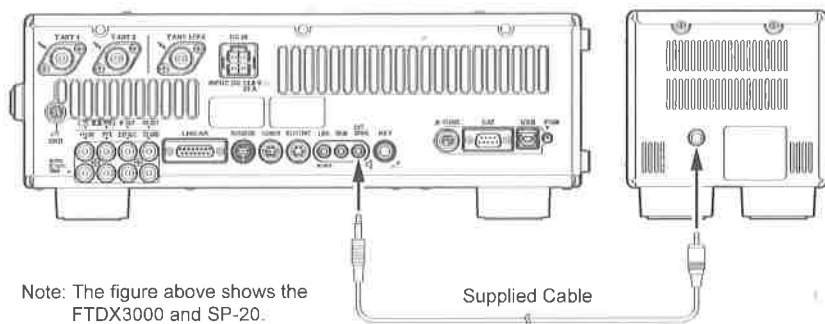

## Adjusting the Front Stand/Legs

### SP-10


Simply fold the stand forward to raise the front of the SP-10, and fold it back against the bottom case to lower the front of the SP-10.

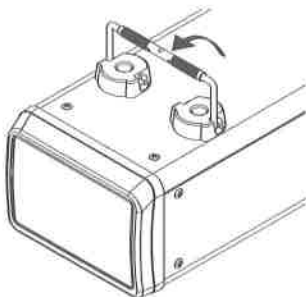

### SP-20

Pull the front legs outward from the bottom panel, and then rotate the legs counter-clockwise to lock them in the extended position.

 Rotate the legs clockwise, and push them inward. The front feet should now be locked in the retracted position.

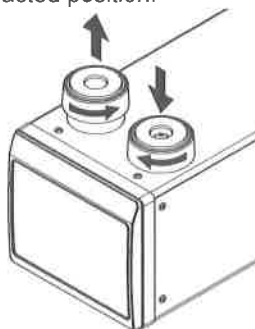

## Specifications

	SP-10	SP-20
Frequency Range:	250 - 20000 Hz	200 - 18000 Hz
Speaker Diameter:	66 mm	100 mm
Maximum input:	3 watts	7 watts
Impedance:	8 ohms	8 ohms
Case Size (WxHxD):	4.33" x 3.15" x 9.96" (110 x 80 x 253 mm)	5.12" x 4.53" x 12.28" (130 x 115 x 312 mm)
Weight (approx.):	2.2 lbs (1.0 kg)	3.75 lbs (1.7 kg)

### **Safety Precautions (Be Sure to Read)**

Be sure to read the safety precautions printed in the Operating Manual of the compatible transceiver to use this product safely.

### **Disposal of Electrical and Electronic Equipment**

Products with the symbol (crossed-out wheeled bin) cannot be disposed of as household waste.

Electronic and Electrical Equipment should be recycled at a facility capable of handling these items and their waste by products.

Please contact a local equipment supplier representative or service center for information about the waste collection system in your country.



E B A 8 0 X 2 0 1



2003y-BS