


NanoVNA-F V2 Quick Start Guide

For firmware v0.3.0
2021/08/03

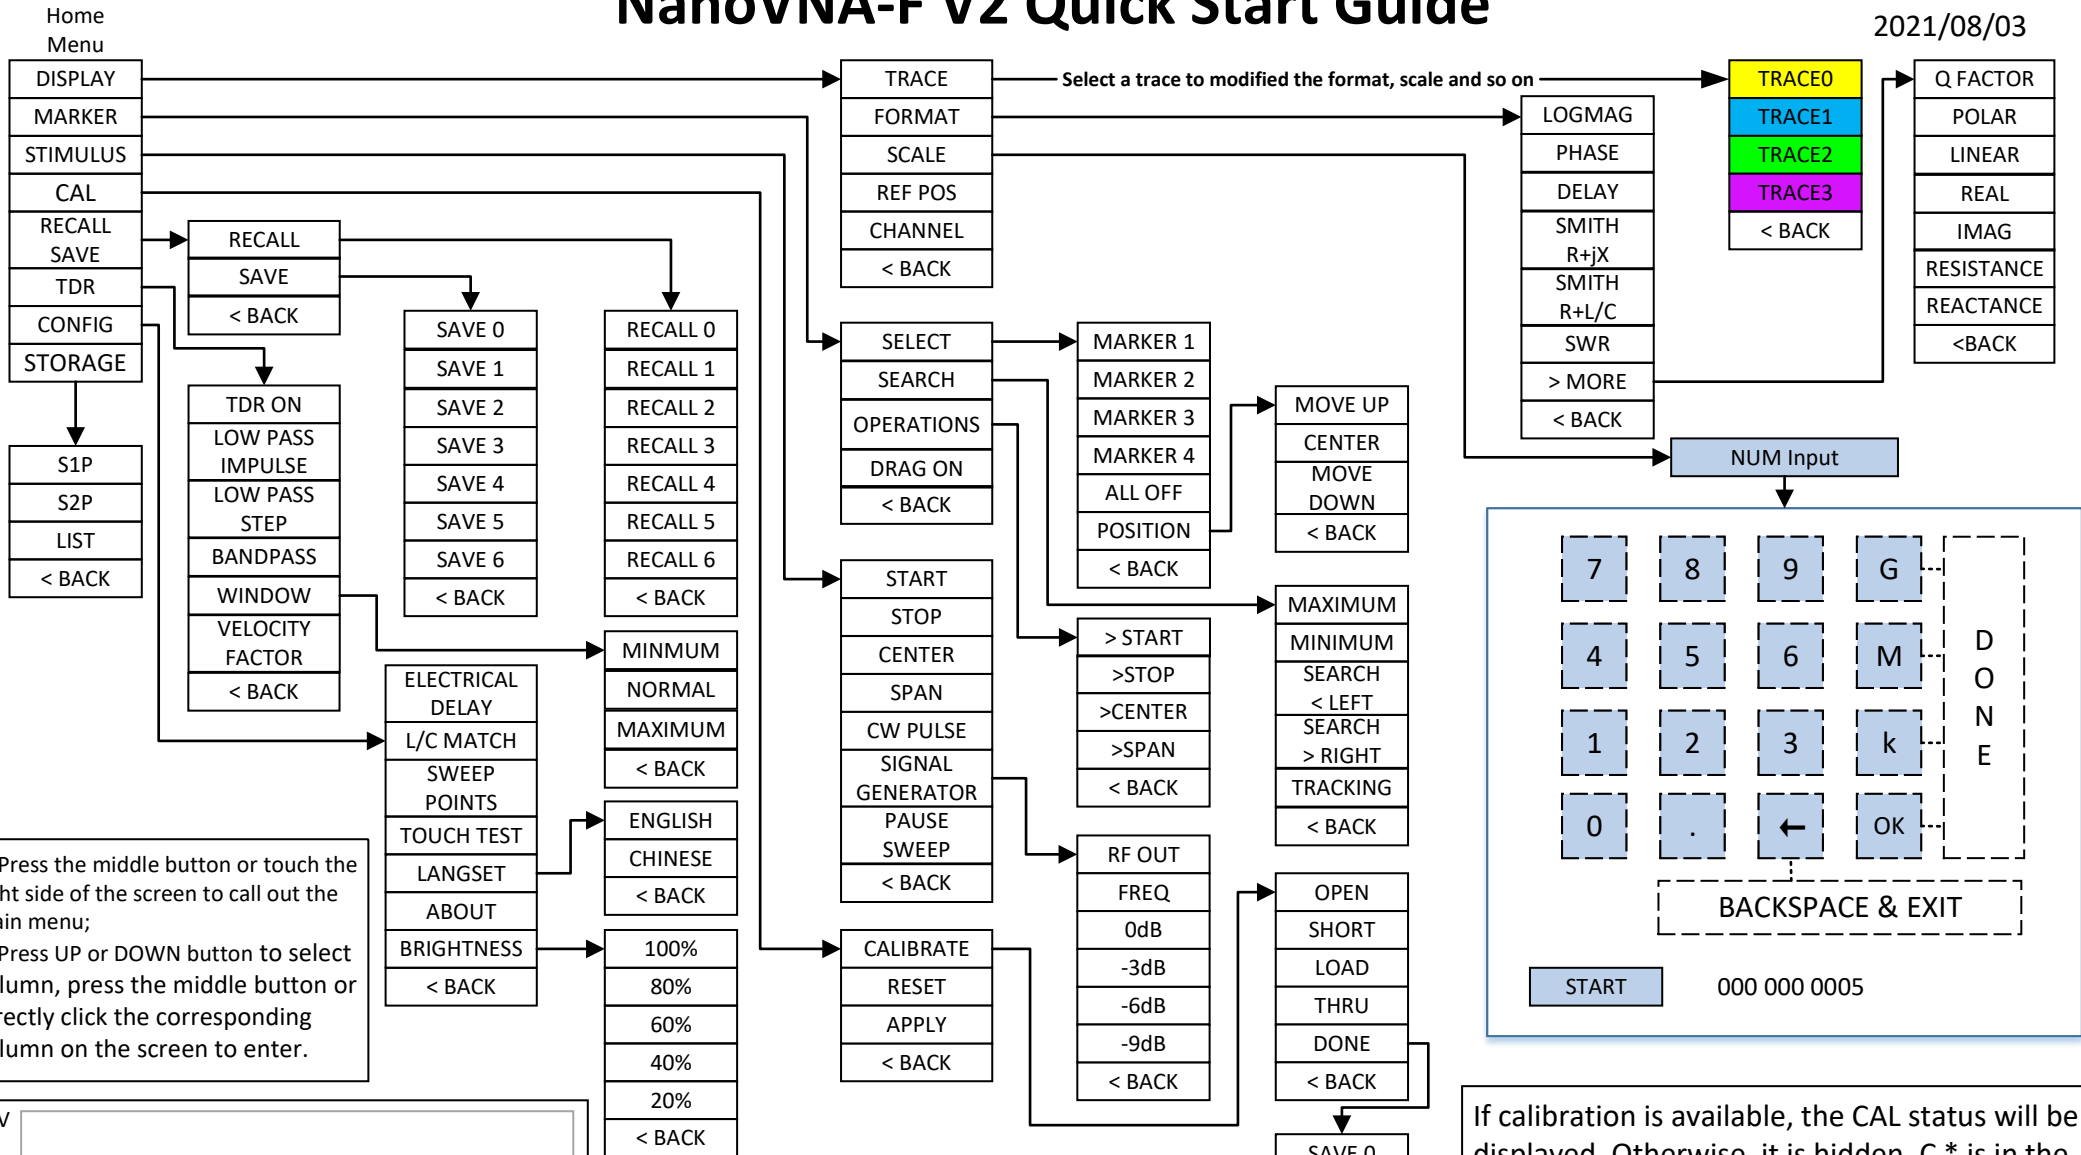

1. Press the middle button or touch the right side of the screen to call out the main menu;
2. Press UP or DOWN button to select column, press the middle button or directly click the corresponding column on the screen to enter.

4.0V

NanoVNA-F V2
 Handheld Vector Network Analyzer
www.sysjoint.com
hamelec.aliexpress.com

START 50.000 kHz OSLT C0 101P STOP 3000.000 000MHz

STATE	STATE	RED LED	BLUE LED
Charging	Charging	Flashing	OFF
	Full charging	ON	OFF
Working	Working	OFF	ON
	Low Battery	OFF	Flashing

If calibration is available, the CAL status will be displayed. Otherwise, it is hidden. C * is in the state where an unsaved calibration is applied(it disappears from memory when the power is turned off).
C0 to C6 Indicates that the saved calibration values are applied to one of the save locations. Saved or Unsaved will change when calibration data is properly saved.